## Upute za predaju točke "model konstrukcije"

## Napomena:

Osim onoga što je prikazano u file-u "report" studenti moraju izračunati efektivne širine za sve grede i donijeti taj proračun <u>s postupkom i skiciranim presjecima!</u> Potrebno je donijeti file modela, pdf verziju file-a "report" i isprintanu verziju file-a "report" (printana verzija može biti crno-bijela).

Potrebno je prikazati cijeli model konstrukcije aksonometrijski te poglede i tlocrt iz programa. Potrebno je prikazati korištene presjeke za pojedini element. Kako bi se na prikazima vidjela razlika u presjecima potrebno je pritsnuti na opciju "view parameters" koja je na slici 1 u lijevom donjem uglu zaokružena crveno. Nakon toga se otvori izbornik koji je vidljiv na slici 1 u kojem treba pritisnuti opciju "setup dialog" koja je zaokružena zelenom bojom. Zatim se otvara glavni izbornik vidljiv na sredini slike gdje u kartici "structure" treba pod opcijom "style +colour" odabrati "colour by cross-section". Tako će se prikazati elementi u skladu s bojama odabranim pri zadavanju poprečnih presjeka. U dokumentu "report" prikazan je primjer izvješća iz programa. Potrebno je priložiti sve elemente kao i u tom dokumentu. Slike svaki student treba sam napraviti. Nova slika se postavi pritiskom desnog klika miša na radnu površinu i odabirom opcije "screenshot into engineering report". Pritiskom na tu opciju ono što je trenutno vidljivo na ekranu se prikaže kao slika u engineering reportu i otvara se izbornik sa slike 3. Pritiskom na opciju u gornjem lijevom uglu koja je zaokružena crvenom bojom izbornik se zatvara, a slika kopira u engineering report. Engineering report se može otvoriti i korigirati odabirom opcije u glavnom izborniku u skladu sa slikom 4. Pritiskom na opciju "engineering report" otvara se novi report koji je vidljiv na slici 5 (ako već postoji neki report otvara se međuizbornik u kojem je potrebno u gornjem lijevom kutu odabrati opciju "new", označiti novi report i stisnuti opciju "open"). Na slici 5 je crveno zaokružena opcija "insert". Pritiskom na tu opciju otvara se ili zatvara pomoćni izbornik zaokružen crveno. U tom izborniku nalaze se sve opcije koje je potrebno prikazati i čiji nazivi su prikazani u dokumentu "report". Dakle, u dokumentu report je jedno poglavlje "7. Cross-sections (libraries)". To znači da je u pomoćnom izborniku potrebno otići u "libraries" i odabrati opciju cross-sections. Pritiskom na tu opciju se u izvješću pojave poprečni presjeci. Na slici 6 je prikazana ta opcija. Header se nelazi u izborniku "special items" pod "header/footer". Na slici 6 su crvenom bojom zaokružene opcije čijim pritiskom se otvara (u ovom slučaju) prikaz presjeka. Na lijevoj strani se nalazi uokvireno zelenom bojom prikaz i redoslijed svih elemenata. Ako se pritisne lijevom tipkom miša na bilo koji element, središnji dio (papir) se pomakne na poziciju te opcije. Desni dio ekrana služi za mijenjanje postavki vezano za svaki element (npr. cross section ili material). Plavom bojom je zaokružena opcija kojom se mijenja naziv naslova. Ako se u lijevom dijelu pritisne pojedini element moguće je

zamijeniti redoslijed tako da se odabere jedna od opcija na vrhu "move up" ili "move down" koja se nalazi pored opcije "insert" vidljive na slici 5.

: 📆 File Edit View Libraries	Tools Modify Tree Plugins Setup Wi	ndow Help		
i 🗅 🚅 🗮 🔛 👱 💷 р	rimjer 💡 i 💋 Iz 👘 🔘	🛱 🖨 👩 🗐 🗊 . 🗄 🗞 👧 📝 . 🗄	・「同帰帰「当風目」:市市市店市は米井 基本」:「「当会」「当会」」第 風炉	😰 🕅 🗢 🔛 🚅 🦙 🕅 -
Tree 🔻 🕂 🗙				
te Main		View parameters setting		
		Check / Uncheck aroun		-
2 Project				
Line grid and storeys			Loads/masses Concrete Composite Medalling/Drawing Attributes Masc. C. View	4
BIM toolbox		Check / Uncheck all		
Structure		E Service		
and Load		Display on opening the service		
		Structure		
OW Dynamics		Style + colour	colour by cross-section	
Masses		Draw member system line	normal additional additiona	
Mass groups		Member system line style	colour by layers	
👫 Combination of mass g		Model type	colour by cross-section	
🕞 📑 Calculation, mesh		Display both models	according to struct.type	
Integrated Design Forms		Member surface	color by design group	
Concrete		Rendering	tenoerea with eages	
Engineering report		Draw cross-section		
🚱 Attributes		Cross-section style	section reaction reac	
🕀 🔛 Drawing Tools		Effective width of plate ribs		
🗉 🗐 Libraries		Draw effective width		
🕀 🔀 Tools		Rendering	transparent ·	
		- Panel		
		Rendering		
		Highlight supporting edges (podes	ttansparent •	
		Load distribution symbol		
		Dicplay linked members		
			1.	
		Display		
		Mark style	Dot v	
		Member parameters		
		System lengths		
		Member nonlinearities		
		FEM type		
		Joists		
		E Local axes		
		Structure •		
		Labels 🕨		
		Model 🕨		
		Loads/masses		
		Concrete		
		composite P		1111
		Modelling/Drawing		
	Z Z	Attributes 🕨		Same No.
	×	Detailed on/off		
		Setup dialog		
	00 🖉 🛆 🌆 🚝 🎬 🎰 💵 📴		Cancel	

Slika 1. Prikaz elemenata u različitim bojama



Slika 2. Slikanje u programu

				Snapshot picture - Insert objects to Engineering report Inbox	×
Insert					
Insert & Close	Insert Insert Close	One at page Dicture cire	Image: Construction Image: Construction   Image: Construction Image: Construction   Image: Construction Image: Construction		
		Ficture 3/20	Frederined properties		

Caption	Analysis model
Picture size definition	Two per page -
Stretch mode	Dark lines 🗸
Rendering	Standard 🗸
Antialiasing quality	None 👻
Rotation	None v
Result information	Inside picture 👻
Export to PDF as 3D	
Position	One below another
Image raster	
Load units in regen. (related to objects created in picture editor only)	
Text scale factor	1
Charset of texts	Western European, UK, USA (Windows-1252) -
Line pattern length	3 -
Display GCS icon	To picture corner 🔹
4 Performance	
Set as non-editable	>>>
Settings	

Slika 3. Formatiranje slike



Slika 4. Engineering report

👩 🍾 🍬	- 🗢 🛨 🗙	🕲 - ÷			Rep	oort_3 [primjer.	esad] - Engine	eering report				-	□ ×
Home	View												
Paste	← Undo ▾ → Redo ▾	Report properties	Insert Edit Delete Move Move	Indent Outder	t Regenerate Regenerate selected outdated *	Edit picture properties	View Edit point pictur	View re parameters	View point DWG colour converter	Extended editin of properties	g Edit external file		
Clipboard	Undo		Document item		Regenerate		Edit pictures		Edit external pictures	Tables	External files		
Navigator		▼ Ŧ ×	Available items 👻	ч×						^	Properties		▼ ₽ ×
			Special items Special items Star Design Forms (standalone) Inbox Project Libraries Sets Solver and Mesh Storey Structure Load Mass Damping Construction stages		Stud	en	1	/@[	°S[0[		Name Language First page number First chapter number Numbering of chapters Hide empty items Swap left / right margins of	Report_3 English (United 1 Structured 	d States) 👻
			Results								Tasks		▼ ₽ ×
			Results v17 Aluminium Custom check Pipeline Timber Concrete Advanced Steel concrete bridge Geotechnics Composite Mobile loads Hinfluence lines Dentrest	~ <	Stud	en	11	/e[	°SI0		Request Stat	e	P
www.scia.net Pag	ie 1 📰										🕂 📑 Page width		

Slika 5. lzvještaj

🧔 🔨 - 🌾 + X 💩 - =	Report_2 [primjer.esad] - Engineering report	- 8 >
Home     View       Image: Second particular second parting second particular second particular second parti	Image: Constraint of the second se	Properties 🗸 🗘
□   Header / Footer     □   Aksonometrijski prikaz konst     □   Pogled X-Z (Snapshot picture)     □   Pogled X-Z (Snapshot picture)     □   One dimenzije (Snapshot picture)     □   Starakteristična ploča aksono     □   Feze i visinske kote (Snapshot picture)     □   Karakteristična ploča aksono     □   Karakteristična ploča aksono     □   Karakteristična ploča aksono     □   Materials     □   Stiffness factors 10     □   Stiffness factors 20     □   Materials     □   Stiffness factors 10     □   Stiffness factors 20     □   Popperty modifiers 20     □   Poppers     □   D member supports     □   D member supports     □   Stiffness factors 20     □	kv20     Type     Rectangle       Detailed     400; 400     Detailed     400; 400       Shape type     Thick-walled     Detailed     200; 200       Item material     C30/37     End       Fabrication     concrete     Colour     Imm       A [m²]     1,6000e-01     A, [m²]     3,3332-01       A, [m²]/A, [m²]     1,3333e-01     1,3333e-01       A, [m²]/A, [m²]     1,6000e+00     1,6000e+00       Golour     Im²     4,0000e-02       A, [m²]/M, Ao [m²/m]     1,6000e+00     1,6000e+00       Gradge     0,000     1,0667e-03       I_y [mn], I_x [mn]     82     82       Waiv [m³], Waiz [m³]     0,0000e+00     0,000e+00       Maju+ [Nm], Maju- [Nm]     0,000e+00	▲   Representation     Name   Cross-sections     Caption   Cross-sections (libraries)     Caption visible   ☑     ▲   Selection     Selection Vype   Filter     Filter   Used     ▲   Table Template     Template name   Default (embedded)
B) Storey B) Storey B) Storeture B) Load B) Mass B) Damping B) Construction stages B) Results B) Special B) Results v17 B) Steel B) Aluminium B) Custom check B) Pipeline B) Timber B) Concrete Advanced B) Steel concrete bridge	kv30. Type Detailed Shape type Item material C30/37 Fabrication Concrete	Tasks v 9 1 0 0 0 0 0 0 Request State P

Slika 6. Navigator

Na slici 7 je prikazana opcija "subsoils". Pritiskom na opciju prikazuju se sva tla koja su postoje u programu. Potrebno je prikazati samo tlo koje je korišteno. Na desnoj strani slike je crvenom bojom zaokružena opcija koju je potrebno promijeniti s "all" na "list". Nakon toga se pojavi opcija "edit selection" kao što je vidljivo na slici 8. Pritiskom na "…" (što je zaokruženo crveno na slici 8) pored te opcije otvara se izbornik sa slike 8. U izborniku je potrebno pronaći tlo koje je korišteno u proračunu i pritisnuti zelenim zaokruženo (na slici) ">". Pritiskom na "OK" se promijeni odabir. Pritiskom na "regenerate selected" ili "regenerate outdated" se u izvješću osvježi odabir. Na slici 9 je crvenim zaokružena opcija "regenerate", a vidljiv je i prikaz korištenog tla. Plavom bojom na istoj slici su zaokružena jednaka tla, tj. vidljivo je da je tlo korišteno kao oslonac na pojedinom elementu (pod 16. 2d member support) jednako kao i tlo pod 15. subsoils. Pod 15 je vidljiva korištena krutost tla.



Slika 7. Prikaz tla

Kies GT*/Stark Tonig/Untergrenze	0,0000e+00	Flexible	0,0000e+00	6,0000e+01	0,0000e+00	0,0000e+00
Sand SW/Weit Gestuft/Untergrenze	0,0000e+00	Flexible	0,0000e+00	4,0000e+01	0,0000e+00	0,0000e+00
Sand SE/Eng Gestuft/Untergrenze	0,0000e+00	Flexible	0,0000e+00	4,0000e+01	0,0000e+00	0,0000e+00
Sand ST/Tonig/Untergrenze	0,0000e+00	Flexible	0,0000e+00	6,0000e+01	0,0000e+00	0,0000e+00
Sand ST*/Stark Tonig/Untergrenze	0,0000e+00	Flexible	0,0000e+00	4,0000e+01	0,0000e+00	0,0000e+00
Ton TL/Leicht Plastisch/Untergrenze	0,0000e+00	Flexible	0,0000e+00	3,0000e+01	0,0000e+00	0,0000e+00
Ton TM/Mittel Plastisch/Untergrenze	0,0000e+00	Flexible	0,0000e+00	1,5000e+01	0,0000e+00	0,0000e+00
Organ OU/Organogene Böden/Untergrenze	0,0000e+00	Flexible	0,0000e+00	5,0000e+00	0,0000e+00	0,0000e+00

## 16. 2D member supports (structure)

Name	Туре	🗌 🦳 🖉 Subsóil 📄 🦳	λE	2D men
SS1	Individual	Gravel/Slightly silty/Moderate - NEN 6740		554
SS2	Individual	Gravel/Slightly silty/Moderate - NEN 6740	S	558
SS3	Individual	Gravel/Slightly silty/Moderate - NEN 6740	5	551
SS4	Individual	Gravel/Slightly silty/Moderate - NEN 6740	S	552
SS5	Individual	Gravel/Slightly silty/Moderate - NEN 6740	S	553



Properties

Name

Caption

Representation

Caption visible Selection



▼ 7 ×

....

▼ ₽ ×

P...

Subsoils

 $\checkmark$ 

List

Subsoils (libraries)

Default (embedded)



## Slika 9. Prikaz tla i opcija refresh